


GROUNDING SET TO USE INDOORS | INSTRUCTIONS

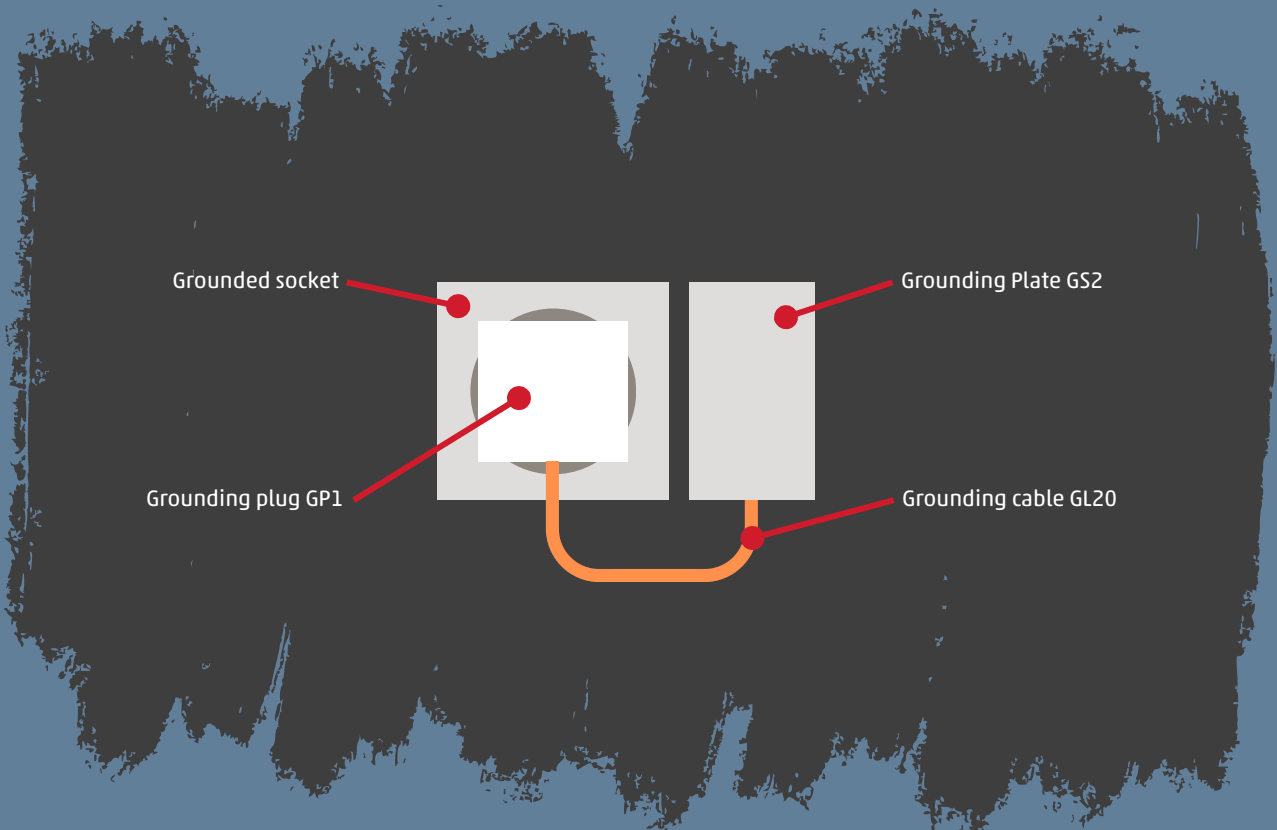

STEP 1)

Mix the Additive AF3 with 5 liters of shielding paint. Stir vigorously for several minutes until completely mixed.

STEP 2)

Paint the wall you'd like to shield and let it dry.

STEP 3)

Mount the Grounding Plate GS2 next to a grounded socket on the painted wall.

STEP 4)

Connect one end of the Grounding cable GL20 to the Grounding plate GS2 and the other end to the Grounding plug GP1.

STEP 5)

Plug the grounding plug GP1 into the socket.